

EMRx and Android App Quick Start Guide

Turn on EMRx Device - hold the red power button for 5 seconds until the LED bar graphs illuminate from left to right and the Bluetooth LED (the singular blue light) blinks once per second.

Confirm at least 3 out of the 4 green battery status LEDs are illuminated. If this is not the case, consider changing the batteries.



Connection to the EMRx App

Open the EMRx App. Select "Start Tracking" to scan for your device.

Select your EMRx Device. The status "EMRx Connected" confirms the connection was successful and you can now view the signal chart.



Adjusting Parameters


The Settings page allows configuration of device parameters including Gain, Magnetic Threshold, LED Brightness, LED Frequencies, and the red LED for detecting magnets or electromagnetic transmitters.



EMRx App Charts

The Signal Chart provides a traditional chart of received signal against time. It is excellent for determining the relative signal strength of up to six colour coded transmitters.

To view other charts and settings, click on the Menu icon.

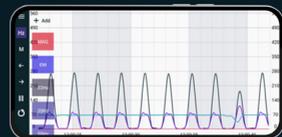

EMRx and Android App Quick Start Guide

Chart Navigation



This button hides or shows the colour coded frequency boxes. Up to six colour coded frequencies can be added by tapping the +Add button. Frequencies can be altered by tapping the relevant colour coded frequency box.



Allows placement of a marker



Jump to previous marker



Jump to next marker



Alternates between a Play and Pause button



This button resets the screens to latest peak recorded

Turning Off

To disconnect and stop tracking, click “Stop Tracking.”

To turn the Receiver off, fully depress and hold the control button for approximately 5 seconds until all LED bar graphs illuminate from right to left.

