

EMRx and Windows App Quick Start Guide


Turn on EMRx Device - hold the red power button for 5 seconds until the LED bar graphs illuminate from left to right and the Bluetooth LED (the singular blue light) blinks once per second.



Confirm at least 3 out of the 4 green battery status LEDs are illuminated. If this is not the case, consider changing the batteries.

Pairing and Connecting to the EMRx App


Start scanning for Bluetooth devices on your device (Start>Settings>+Add Bluetooth or other device>Bluetooth). Select your EMRx Device.

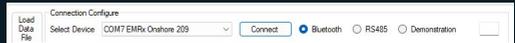

Open the EMRx App. Navigate to the Connection Configure group to connect.


Adjusting Parameters

The Settings page allows configuration of device parameters including Gain, Magnetic Threshold, LED Brightness, LED Frequencies, and the red LED for detecting magnets or electromagnetic transmitters.

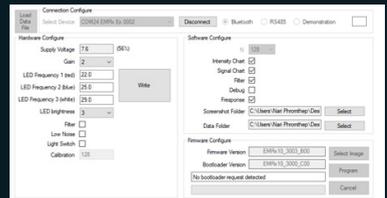

EMRx App Charts

The Signal Chart provides a traditional chart of received signal against time. It is excellent for determining the relative signal strength of up to six colour coded transmitters.

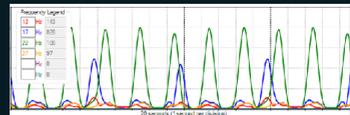

To view other charts and settings, click on the relevant icon in the menu.



EMRx and Windows App Quick Start Guide

App Navigation



Displays the Connection Configure Group



Pause or Play all charts



Display the signal strength chart



Display the spectrum chart



Display the raw signal chart



Display the settings page



Captures a screenshot



Enables or disables audio output

Turning Off

To disconnect and stop tracking, click “Disconnect”

To turn the Receiver off, fully depress and hold the control button for approximately 5 seconds until all LED bar graphs illuminate from right to left.

